

Vertical Gripper, Slider Type

Vertical Gripper, Lever Type

RCD-GRSN RCP2-GRSS RCP4-GRSML/GRSLL/GRSWL RCP2-GRLS RCP4-GRLM/GRLL/GRLW




Achieving High-speed Opening/Closing


Vertical Grippers – The Newest Additions to IAI's Mo

RCD-GRSNA RCP2-GRSS RCP4-GRSML RCP4-GRSLL RCP4-GRSWL

1 Slider Type and Lever Type

Vertical grippers are available in two types, including the slider type that comes with a guide to achieve excellent rigidity, and the lever type whose levers open by 180 degrees for easy gripping of the work part.

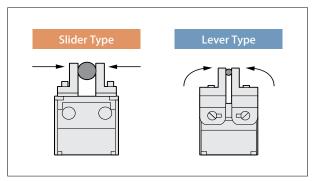


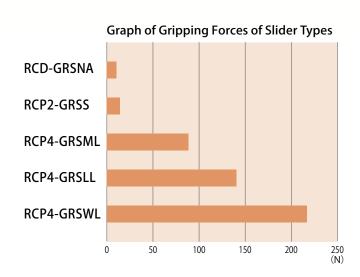

and High Gripping Force



torized Gripper Series

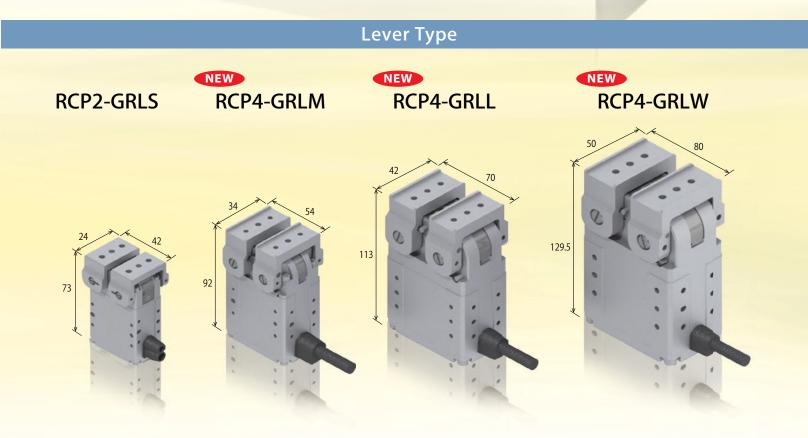

2 Supporting Multi-point Positioning, Adjustable Gripping Force

Up to 512 positioning points are supported via servo control, and the force with which to grip the work part is adjustable. This makes it possible to adjust the finger opening/closing width and grip easy-to-deform work parts.

3 Highly Rigid, Accurate Guide and Driving Part

The slider type comes with a highly rigid linear guide to demonstrate high moment rigidity. Thanks to its backlash eliminating mechanism, the guide is subject to less displacement upon positioning. The driving part adopts a geared structure (worm + helical gears) to achieve high rigidity and excellent response.

Self-locking Mechanism to Prevent the Work Part from Dropping upon Power Off

The self-locking mechanism prevents the work part from dropping when the power is turned off or an emergency stop is actuated. The slider and levers can be opened with ease using an Allen wrench.


* The actuator cannot be kept pushing the work part

5 Ultra-compact Slider Type



2

Gripper Lineup

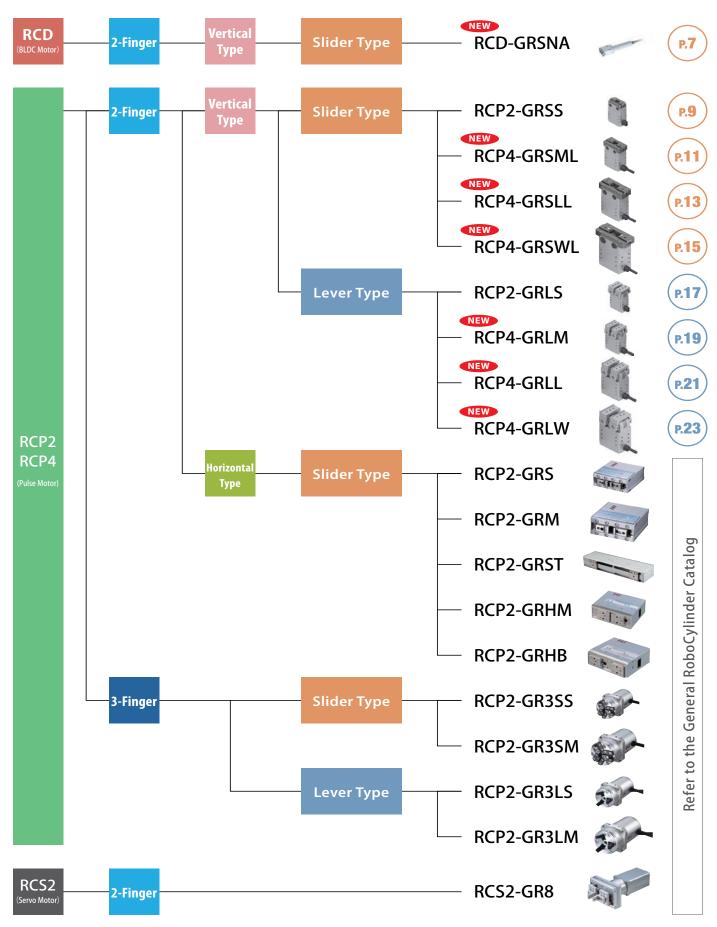

Gripper Specification

Slider Type

| Туре | Mini Slider Type | Small Slider Type | Medium Slider Type | Large Slider Type | Extra Large Slider Type |
|---|---|---|--|-------------------------|-------------------------|
| Model | RCD-GRSNA | RCP2-GRSS | RCP4-GRSML | RCP4-GRSLL | RCP4-GRSWL |
| External View | | | | | |
| | DC brushless motor | | Pulse | motor | |
| Motor | DC DIUSTILESS THOUGH | □20×t30 | □28×t34.5 | □35×t37 | □42×t47.5 |
| Position Detection | Optical encoder | | Magnetic encod | ler (incremental) | |
| Drive System | Lead screw + grooved cam | | Worm + double-helic | al + helical rack gears | |
| Guide | | Linear guide | | | |
| Opening/Closing Stroke (mm) | 4 | 8 | 14 | 22 | 30 |
| Gripping Force (N) | 10 | 14 | 87 | 140 | 220 |
| Opening/Closing Speed (mm/sec) | 67 | ~78 | ~94 | ~125 | 157 |
| Positioning Repeatability (mm) | ±0.05 | | ±0 | 0.01 | |
| Gripping Force Adjustment Range | 40~70% | | 20~ | 70% | |
| Actuator Cable (*1) | Standa | rd cable | | Robot cable | |
| Extension Cable (*2) | Standard cable (Model: CB-CAN-MPA \cup \cup \cup) Robot cable (Model: CB-CAN-MPA-\cup \cup RB) | Robot cable (Model: CB-APSEP-MPA-□□□) | Standard cable (Model: CB-CAN-MPA \cup \cup \) Robot cable (Model: CB-CAN-MPA \cup \cup -RB) | | |
| Exterior Dimensions of Actuator Frame (L x W x H) | 22×15×84 | 42×24×71 | 62×34×87.5 | 88×42×110 | 107×50×124.5 |
| Actuator Mass (kg) | 0.085 | 0.2 | 0.5 | 1.0 | 1.6 |
| See Page | P.7 | P.9 | P.11 | P.13 | P.15 |

^(*1) This is the cable of approx. $0.2\ m$ in length coming out from the gripper.

Lever Type

| Туре | Small Lever Type | Medium Lever Type | Large Lever Type | Extra Large Lever Type | |
|---|---|---|-------------------|------------------------|--|
| Model | RCP2-GRLS | RCP4-GRLM | RCP4-GRLL | RCP4-GRLW | |
| External View | | Col | Q | | |
| | | Pulse | motor | | |
| Motor | □20×t30 | □28×t34.5 | □35×t37 | □42×t47.5 | |
| Position Detection | | Magnetic encod | ler (incremental) | | |
| Drive System | | Worm + doubl | e-helical gears | | |
| Guide | | | _ | | |
| Range of Operation (deg) | | 18 | 30 | | |
| Gripping Force (N) | 6.4 | 35 | 60 | 90 | |
| Opening/Closing Speed (deg/sec) | ~600 | ~600 | ~600 | ~643 | |
| Positioning Repeatability (deg) | | ±0 | 0.05 | | |
| Gripping Force Adjustment Range | | 20~ | 70% | | |
| Actuator Cable (*1) | Standard cable | | Robot cable | | |
| Extension Cable (*2) | Robot cable (Model: CB-APSEP-MPA-□□□) | Standard cable (Model: CB-CAN-MPA□□□) Robot cable (Model: CB-CAN-MPA□□□-RB) | | | |
| Exterior Dimensions of Actuator Frame (L x W x H) | 42×24×73 | 54×34×92 | 70×42×113 | 80×50×129.5 | |
| Actuator Mass (kg) | 0.2 | 0.5 | 1 | 1.4 | |
| See Page | P.17 | Р.19 | P. 21 | P.23 | |


^(*1) This is the cable of approx. 0.2 m in length coming out from the gripper.

^(*2) This cable is used to connect the controller to the connector at the end of the actuator cable.


^(*2) This cable is used to connect the controller to the connector at the end of the actuator cable.

System Configuration


Configuration of DSEP System

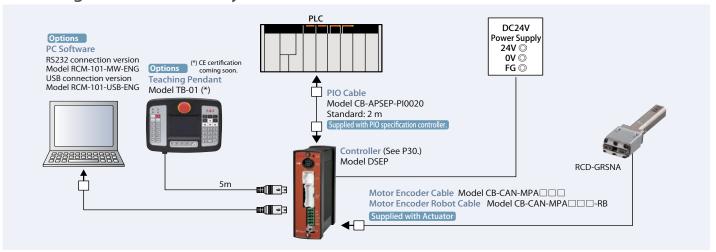

Configuration of PCON-CA System

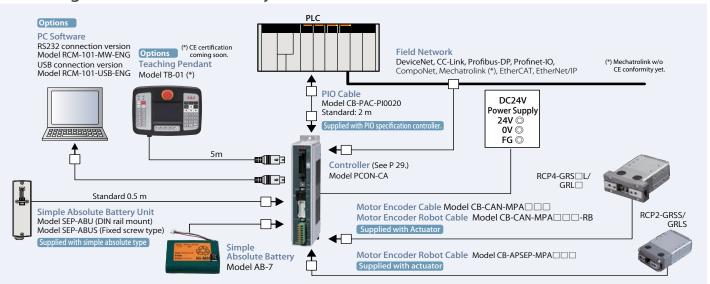


Configuration of MSEP System

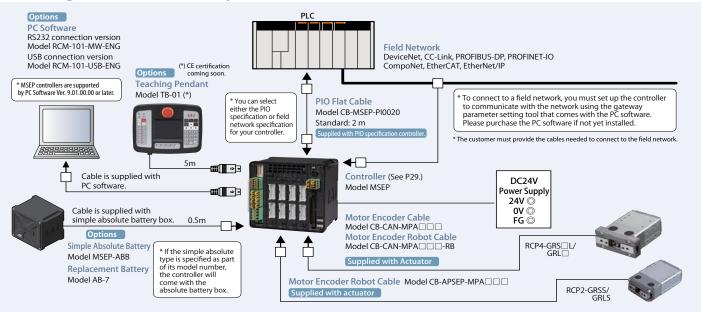


Model Number


<RCD Series>

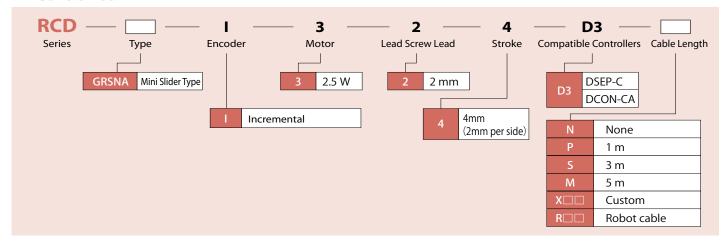

<RCP2 Series>

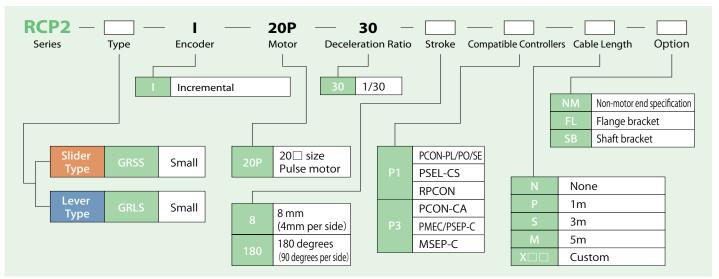

<RCP4 Series>

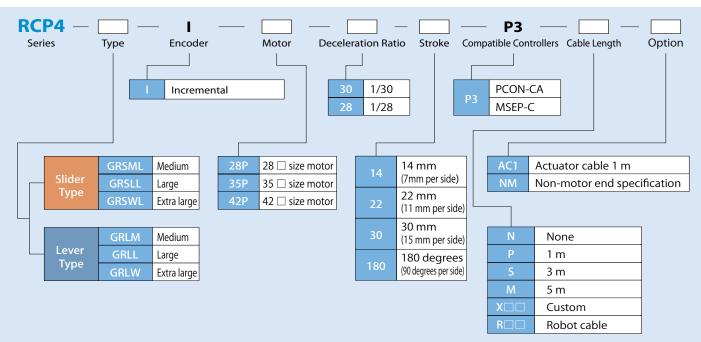

RCD-GRSNA

RoboCylinder 2-Finger Gripper Vertical Mini Slider Type 22 mm Width BLDC Motor

I: Incremental

3 2

2:2 mm

3: 2.5 W

BLDC motor

4:4 mm

(2 mm per side)

D3 Compatible Controllers D3: DSEP

DCON-CA

Cable Length

N:None
P:1 m
S:3 m
M:5 m
X: : Custom
R: : Robot cable









- (1) The maximum opening/closing speed indicates the operating speed on one side. The relative operating speed is twice this value.
- (2) The maximum gripping force is the sum of the gripping forces of both fingers, at a gripping point where there is no offset or overhang distance. The work part weight that can be actually moved depends on the friction coefficient between the gripper fingers and the work part, as well as on the shape of the work part. As a rough guide, a work part's weight should not exceed 1/10 to 1/20 of the gripping force. (See page 25 for details.)
- (3) The maximum acceleration while moving is 1 G.

■ Gripping Force vs. Electric Current Limit

The gripping (pushing) force can be adjusted freely within the range of electric current limits of 40% to 70%.

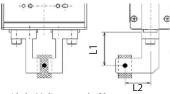

- * Operate with the L1 distance under 20 mm.
- Operate with the L1 distance under 20 mm.
 The gripping force in the graph below assumes that L1 and L2 inthe figure above are zero. (Refer to p. 26 for the rough guide ongripping force at each distance of L1.) Also note that the grippingforce is a sum of gripping forces of both fingers.

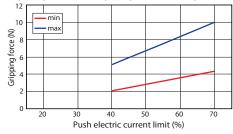

- * The gripping force graph above shows the number of references.
- * Please note that, when gripping (pushing), the speed is fixed at 5 mm/s.

Actuator Specifications

■ Lead and Payload

| Model Number | Deceleration | Max. Gripping | Stroke |
|------------------------|--------------|--------------------|-------------------|
| | Ratio | Force (N) | (mm) |
| RCD-GRSNA-I-3-2-4-D3-① | 3.7 | 10 (5 per side) | 4 (2 per side) |

Legend: ① Cable length

■ Stroke and Max. Opening/Closing Speed

| Stroke (mm) | Max. Speed (mm/s) |
|-------------|-------------------|
| 4 | 7 6 |

| Cable List | | | |
|----------------|-------------------------------------|--|--|
| Type | Cable Symbol | | |
| | P (1m) | | |
| Standard Type | S (3m) | | |
| | M (5m) | | |
| | X06 (6m) ~ X10 (10m) | | |
| Special Length | X11 (11m) ~ X15 (15m) | | |
| | X16 (16m) ~ X20 (20m) | | |
| | R01 (1m) ~ R03 (3m) | | |
| | R04 (4m) ~ R05 (5m) | | |
| Robot Cable | R06 (6m) ~ R10 (10m) | | |
| | R11 (11m) ~ R15 (15m) | | |
| | R16 (16m) ~ R20 (20m) | | |


| Actuator Specifications | | | | |
|----------------------------------|---|--|--|--|
| ltem | Description | | | |
| Drive System | Lead screw + grooved cam | | | |
| Positioning Repeatability | ±0.05 mm | | | |
| Backlash per finger | 0.4 mm or less | | | |
| Lost Motion | 0.25 mm or less per side | | | |
| Guide | Linear guide | | | |
| Static Allowable Moment | Ma: 0.04N•m Mb: 0.04N•m Mc: 0.07N•m | | | |
| Weight | 0.085 kg | | | |
| Ambient Operating Temp./Humidity | 0 to 40° C. 85% RH or less (non-condensing) | | | |

website. www.intelligentactuator.com





- *1 The maximum range in which the finger operates for home return operation, etc. Be careful not to let the finger contacts other finger belonging to the customer or any work present nearby.
- *2 The finger moves to the dimensions shown in [] during home return, so pay attention to contact.
- *3 The actuator cable is not a robot cable, so it must be secured while in use.

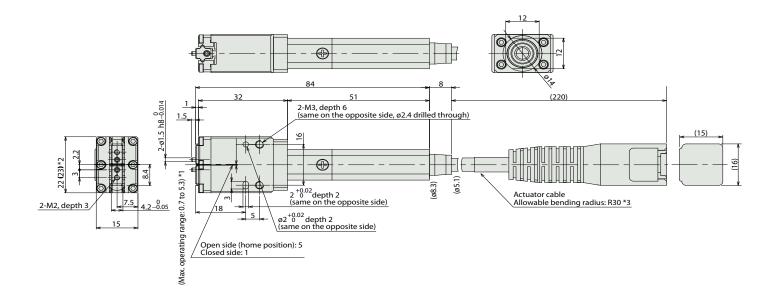

Compatible Controllers

The RCD series actuators can operate with the controllers below. Select the controller according to your usage.

| Name | External View | Model Number | Description | Max. Pos. Points | Input Voltage | Power Supply Capacity | See Page |
|-------------------------------------|---------------|--------------------|---|------------------|---------------|-----------------------------|----------|
| Solenoid Valve Type | | DSEP-C-3I-①-2-0 | Simple controller capable of operating actuators with the same signals used to operate solenoid | 2 points | | (Standard specification) | |
| Dustproof Solenoid Valve Type | | DSEP-CW-3I-①-2-0 | valves, supporting both the single-solenoid method and the double-solenoid method. | 3 points | | Rated: 0.7A Max: 1.5A | → P30 |
| Positioner Type | 222 | DCON-CA-3I-①-2-0 | PIO control ready | 512 points | DC24V | | |
| Pulse Train Type | | DCON-CA-3I-PL□-2-0 | Pulse-train input ready | - | | Rated: 0.7A Max: 1.5A | → P30 |
| Network Type | mal /s | DCON-CA-3I-④-0-0 | Field network ready | 768 points | | | |

^{*} ① indicates I/O type (NP/PN).

Note: Take note that the simple absolute type is not available.

^{*}indicates N (NPN specification) or P (PNP specification) symbol.

^{*} ④ indicates field network specification symbol.

CP2-GRS

RoboCylinder 2-Finger Gripper Vertical Small Slider Type 42 mm Width Pulse Motor

■ Model Description RCP2-

GRSS -Туре

I: Incremental

* The Simple absolute encoder is also considered type "I."

20P

20P : 20□ size

Pulse motor

30

30:1/30

Deceleration

ratio

8 Stroke 8 mm

(4mm per

side)

P1:PCON-PL/PO/SE PSEL RPCON

P3:PCON-CA PMEC/PSEP MSEP

N : None P : 1m S : 3m M: 5m X□□: Custom

Option NM: Non-motor end specification

FB: Flange bracket SB : Shaft bracket











- (1) The maximum opening/closing speed indicates the operating speed on one side. The relative operating speed is twice this value.
- (2) The maximum gripping force is the sum of the gripping forces of both fingers, at a gripping point where there is no offset or overhang distance. The work part weight that can be actually moved depends on the friction coefficient between the gripper fingers and the work part, as well as on the shape of the work part. As a rough guide, a work part's weight should not exceed 1/10 to 1/20 of the gripping force. (See page 25 for details.)
- (3) The rated acceleration while moving is 0.3 G.

■ Gripping Force vs. Electric Current Limit

The gripping (pushing) force can be adjusted freely within the range of electric current limits of 20% to 70%.

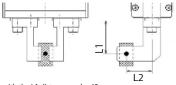

- * Operate with the L1 distance under 40 mm
- The gripping force in the graph below assumes that L1 and L2 in the figure above are zero. (Refer to p. 26 for the rough guide on gripping force at each distance of L1.) Also note that the gripping force is a sum of gripping forces of both fingers.

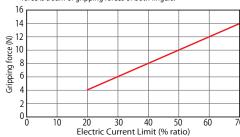

* The gripping force graph above shows the number of references. Please allow margins up to \pm 15%.

Actuator Specifications

■ Lead and Payload

| Model Number | Deceleration | Max. Gripping | Stroke |
|------------------------------------|--------------|--------------------|-------------------|
| | Ratio | Force (N) | (mm) |
| RCP2-GRSS-I-20P-30-8- 11 - 22 - 33 | 30 | 14 (7 per side) | 8 (4 per side) |

Legend: 1 Compatible controllers 2 Cable length 3 Options

Stroke and Max. Opening/Closing Speed

| Decele- | 8 |
|--------------|------------------|
| ration Ratio | (mm) |
| 30 | 78 (per side) |

(Unit: mm/s)

| Cable List | | |
|--------------------------------|-------------------------------------|--|
| Type | Cable Symbol | |
| туре | | |
| Canadaud Tona | P (1m) | |
| Standard Type (Robot cable) | S (3m) | |
| (NODOL CADIE) | M (5m) | |
| | X06 (6m) ~ X10 (10m) | |
| Special Length | X11 (11m) ~ X15 (15m) | |
| | X16 (16m) ~ X20 (20m) | |

^{*} The standard cable is the motor-encoder integrated robot cable.

| Actuator Specifications | | | |
|----------------------------------|--|--|--|
| Item | Description | | |
| Drive System | Worm gear + helical gear + helical rack | | |
| Positioning Repeatability | ±0.01 mm | | |
| Backlash | 0.2 mm or less per side (constantly pressed out by a spring) | | |
| Lost Motion | 0.05 mm or less per side | | |
| Guide | Linear guide | | |
| Allowable Static Load Moment | Ma: 0.5N•m Mb: 0.5N•m Mc: 1.5N•m | | |
| Weight | 0.2 kg | | |
| Ambient Operating Temp./Humidity | 0 to 40°C, 85% RH or less (non-condensing) | | |

| Option List | | | | | | |
|-----------------------------|-------------|----------|--|--|--|--|
| Name | Option Code | See Page | | | | |
| Non-motor end specification | NM | P10 | | | | |
| Flange bracket | FB | - | | | | |
| Shaft bracket | SB | _ | | | | |


^{*} Please note that, when gripping (pushing), the speed is fixed at 5 mm/s.

www.intelligentactuator.com





- * The opening side of the slider is the home position.
- *1 The motor-encoder cable is connected here.
- *2 Use all tap holes (4 locations) on the same mounting surface to secure the actuator.
- *3 Do not screw in the bolt beyond the depth of the fixing tap hole. The internal parts may be damaged.
- *4 The actuator cable is not a robot cable, so secure the cable while the actuator is in use.

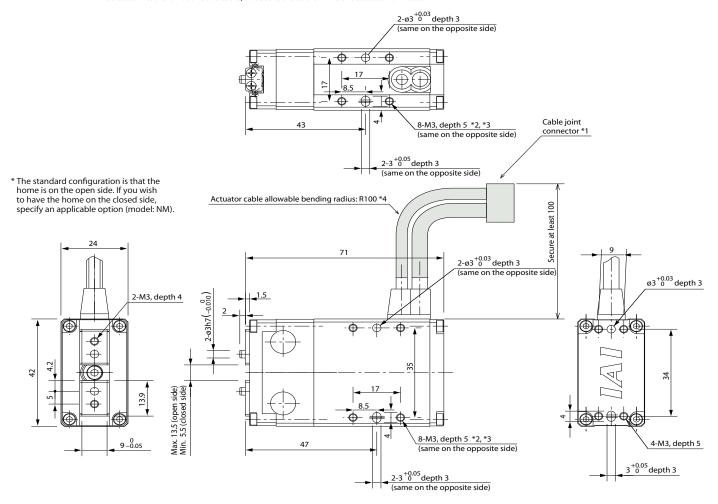

Compatible Controllers

The RCP2 series actuators can operate with the controllers below. Select the controller according to your usage.

| Name | External View | Model Number | Description | Max. Pos. Points | Input Voltage | Power Supply Capacity | See Page |
|---|---------------|------------------------|---|------------------|---------------|--------------------------------------|---------------------|
| Solenoid Valve Multi-axis Type PIO Specification | lui e | MSEP-C- ③ -~- ① -2-0 | Positioner type based on PIO control, allowing up to 8 axes to be connected | 3 points | | See RoboCylinder General Catalog. | |
| Solenoid Valve Multi-axis Type Net- work Specification | | MSEP-C- ③ -~- ④ -0-0 | Filed network-ready positioner type, allowing up to 8 axes to be connected | 256 points | | General Catalog. | |
| Positioner Type | Ü | PCON-CA-20PI- ① -2-0 | PIO control ready | 512 points | | | → P29 |
| Pulse Train Type | | PCON-CA-20PI-PL□-2-0 | Pulse-train input ready | - | | 1A max. | |
| Network Type | | PCON-CA-20PI- 4 -0-0 | Field network ready | 768 points | DC24V | | |
| Pulse Train Type (Differential Line Driver Specification) | | PCON-PL-20PI- ① -2-0 | Differential line driver ready | | | | |
| Pulse Train Type (Open Collector Specification) | | PCON-PO-20PI- ① -2-0 | Open collector ready | | | See RoboCylinder | See RoboCylinder |
| Serial Communi- cation Type | | PCON-SE-20PI-N-0-0 | Dedicated serial communication type | 64 points | | General Catalog. | General Catalog. |
| Program Control Type | | PSEL-CS-1-20PI- ① -2-0 | Program operation is possible. Operation is possible up to 2 axes. | 1500 points | | | |

^{*} This is for the single-axis PSEL.
*③ indicates number of axes (1~8).

^{*} \square indicates N (NPN specification) or P (PNP specification) symbol.

^{*} ① indicates I/O type (NP/PN).
* ④ indicates field network specification symbol.

P4-GRSMI

RoboCylinder 2-Finger Gripper Vertical Medium Slider Type 54 mm Width Pulse Motor

Model
Description

RCP4 - GRSML-

28P Motor

28P: 28 □ size

Pulse motor

30 -14 Stroke -

P3 Compatible Controllers

N : None

Notes on Selection AC1: Actuator cable 1 m

ratio

30:1/30 14:14 mm Deceleration (7 mm per side) P3: PCON-CA MSEP-C

P:1m S:3m M:5m X □□ : Custom R □□ : Robot cable

NM: Non-motor end specification

C ∈ RoHS



I: Incremental


* The Simple absolute encoder is also considered type "I."



- (1) The maximum opening/closing speed indicates the operating speed on one side. The relative operating speed is twice this value.
- (2) The maximum gripping force is the sum of the gripping forces of both fingers, at a gripping point where there is no offset or overhang distance. The work part weight that can be actually moved depends on the friction coefficient between the gripper fingers and the work part, as well as on the shape of the work part. As a rough guide, a work part's weight should not exceed 1/10 to 1/20 of the gripping force. (See page 25 for details.)
- (3) The rated acceleration while moving is 0.3 G.


■ Gripping Force vs. Electric Current Limit

The gripping (pushing) force can be adjusted freely within the range of electric current limits of 20% to 70%.

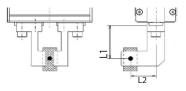

- * Operate with the L1 distance under 80 mm.

 * The gripping force in the graph below assumes that L1 and L2 the figure above are zero. (Refer to p. 26 for the rough guide gripping force at each distance of L1.) Also note that the gripping force is a sum of gripping forces of both fingers.

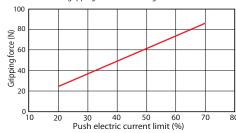

- * The gripping force graph above shows the number of references. Please allow margins up to $\pm 15\%$
- * Please note that, when gripping (pushing), the speed is fixed at 5 mm/s.

Actuator Specifications

■ Lead and Payload

Cable List

| Model Number | Deceleration | Max. Gripping | Stroke |
|----------------------------------|--------------|-----------------------|--------------------|
| | Ratio | Force (N) | (mm) |
| RCP4-GRSML-I-28P-30-14-P3- 1 - 2 | 30 | 87 (43.5 per side) | 14 (7 per side) |

Legend: 1 Cable length 2 Options

■ Stroke and Max. Opening/Closing Speed

| Stroke (mm) | Max. Speed (mm/s) |
|-------------|-------------------|
| 14 | 94 |

Cable Symbol **P** (1m) Standard Type **S** (3m) **M** (5m) **X06** (6m) ~ **X10** (10m) Special Length **X11** (11m) ~ **X15** (15m) **X16** (16m) ~ **X20** (20m) **R01** (1m) ∼ **R03** (3m) **R04** (4m) \sim **R05** (5m) **R06** (6m) ~ R10 (10m) Robot Cable **R11** (11m) ~ **R15** (15m) **R16** (16m) ~ **R20** (20m)

| Option List | | | | | | |
|-----------------------------|-------------|----------|--|--|--|--|
| Name | Option Code | See Page | | | | |
| Actuator Cable 1 m | AC1 | P12 | | | | |
| Non-motor end specification | NM | P12 | | | | |

Actuator Specifications


| · | | | | |
|----------------------------------|--|--|--|--|
| ltem | Description | | | |
| Drive System | Worm gear + helical gear + helical rack | | | |
| Positioning Repeatability | ±0.01 mm | | | |
| Backlash per Finger | 0.3 mm or less | | | |
| Lost Motion | 0.15 mm or less per side | | | |
| Guide | Linear guide | | | |
| Static Load Moment | Ma: 1.9N•m Mb: 2.7N•m Mc: 4.6N•m | | | |
| Weight | 0.5 kg | | | |
| Ambient Operating Temp./Humidity | 0 to 40°C, 85% RH or less (non-condensing) | | | |

www.intelligentactuator.com





- *1 This is the maximum range over which the finger operates during home return operation, etc. Be careful not to let the finger contact the customer's finger, any nearby work part, etc. *2 The actuator cable is a robot cable.
- *3 Use all tap holes (4 locations) on the same mounting surface to secure the actuator.
- *4 Do not screw in the bolt beyond the depth of the fixing tap hole. The internal parts may be damaged.
- * The standard length of the actuator cable is 200 mm. The cable length can be changed to 1000 mm by selecting an applicable option (model: AC1).

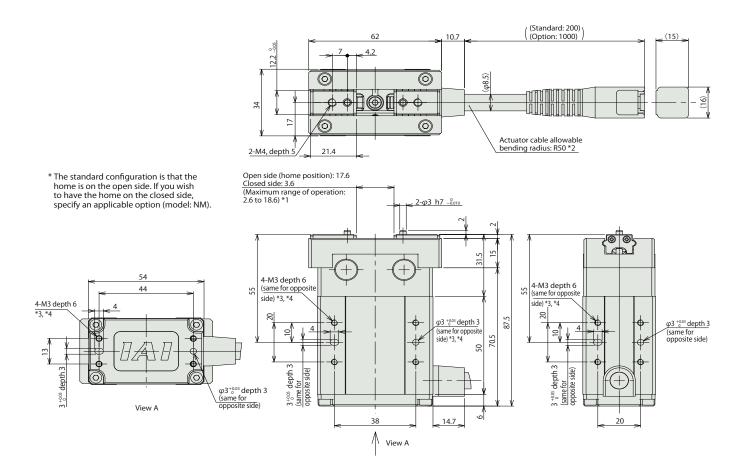

Compatible Controllers

The RCP4 series actuators can operate with the controllers below. Select the controller according to your usage.

| Name | External View | Model Number | Description | Max. Pos. Points | Input Voltage | Power Supply Capacity | See Page |
|--|---------------|----------------------|--|------------------|---------------|-----------------------|----------|
| Solenoid Valve Multi-axis Type PIO Specification | dung l | MSEP-C- ③ -~- ① -2-0 | Positioner type based on PIO control, allowing up to 8 axes to be connected | 3 points | | See RoboCylinder | |
| Solenoid Valve Multi-axis Type Net- work Specification | HANA | MSEP-C- ③ -~- ④ -0-0 | Filed network-ready positioner type, allowing up to 8 axes to be connected | 256 points | | General Catalog. | |
| Positioner Type | 21 | PCON-CA-28PI- ① -2-0 | PIO control ready | 512 points | DC24V | | → P29 |
| Pulse Train Type | | PCON-CA-28PI-PL□-2-0 | Pulse-train input ready | | | 2.2 A max. | |
| Network Type | #U. | PCON-CA-28PI- ④ -0-0 | Field network ready | 768 points | | | |

- * ① indicates I/O type (NP/PN).
- * (4) indicates field network specification symbol.
- *③ indicates number of axes (1~8).
 *□ indicates N (NPN specification) or P (PNP specification) symbol.

CP4-GRSLL

RoboCylinder 2-Finger Gripper Vertical Large Slider Type 70 mm Width Pulse Motor

Model
Description

RCP4 - GRSLL -

I: Incremental

* The Simple absolute encoder is also considered type "I."

35P -

30:1/30

35P : 35 □ size

Pulse motor

22

Deceleration (11 mm per side) ratio

22:22 mm

P3: PCON-CA MSEP-C

N : None P : 1 m S : 3 m M : 5 m X □□ : Custom R □□ : Robot cable

AC1: Actuator cable 1 m

NM : Non-motor end specification










- (1) The maximum opening/closing speed indicates the operating speed on one side. The relative operating speed is twice this value.
- (2) The maximum gripping force is the sum of the gripping forces of both fingers, at a gripping point where there is no offset or overhand distance. The work part weight that can be actually moved depends on the friction coefficient between the gripper fingers and the work part, as well as on the shape of the work part. As a rough guide, a work part's weight should not exceed 1/10 to 1/20 of the gripping force. (See page 25 for details.)
- (3) The rated acceleration while moving is 0.3 G.


■ Gripping Force vs. Electric Current Limit

The gripping (pushing) force can be adjusted freely within the range of electric current limits of 20% to 70%.

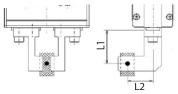

- * Operate with the L1 distance under 100 mm.

 * The gripping force in the graph below assumes that L1 and L2 the figure above are zero. (Refer to p. 26 for the rough guide gripping force at each distance of L1.) Also note that the gripping force is a sum of gripping forces of both fingers.

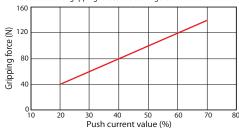

- * The gripping force graph above shows the number of references. Please allow margins up to $\pm 15\%$
- * Please note that, when gripping (pushing), the speed is fixed at 5 mm/s.

Actuator Specifications

■ Lead and Payload

| Model Number | Deceleration | Max. Gripping | Stroke |
|-----------------------------------|--------------|----------------------|---------------------|
| | Ratio | Force (N) | (mm) |
| RCP4-GRSLL-I-35P-30-22-P3- 11 - 2 | 30 | 140 (70 per side) | 22 (11 per side) |

Legend: 1 Cable length 2 Options

■ Stroke and Max. Opening/Closing Speed

| Stroke (mm) | Max. Speed (mm/s) |
|-------------|-------------------|
| 22 | 125 |

| Cable List | | |
|----------------|-------------------------------------|--|
| | | |
| Type | Cable Symbol | |
| | P (1m) | |
| Standard Type | S (3m) | |
| | M (5m) | |
| | X06 (6m) ~ X10 (10m) | |
| Special Length | X11 (11m) ~ X15 (15m) | |
| | X16 (16m) ~ X20 (20m) | |
| | R01 (1m) ~ R03 (3m) | |
| | R04 (4m) ~ R05 (5m) | |
| Robot Cable | R06 (6m) ~ R10 (10m) | |
| | R11 (11m) ~ R15 (15m) | |
| | R16 (16m) ~ R20 (20m) | |

| Option List | | | |
|-----------------------------|-------------|----------|--|
| Name | Option Code | See Page | |
| Actuator Cable 1 m | AC1 | P14 | |
| Non-motor end specification | NM | P14 | |


Actuator Specifications

| Item | Description | | |
|----------------------------------|--|--|--|
| Drive System | Worm gear + helical gear + helical rack | | |
| Positioning Repeatability | ±0.01 mm | | |
| Backlash per Finger | 0.4 mm or less | | |
| Lost Motion | 0.15 mm or less per side | | |
| Guide | Linear guide | | |
| Static Load Moment | Ma: 3.8N•m Mb: 5.5N•m Mc: 9.5N•m | | |
| Weight | 1.0 kg | | |
| Ambient Operating Temp./Humidity | 0 to 40°C, 85% RH or less (non-condensing) | | |





- *1 This is the maximum range over which the finger operates during home return operation, etc. Be careful not to let the finger contact the customer's finger, any nearby work part, etc.
- *2 Be careful not to let the finger contact any nearby object or structure as it moves to the dimension in [] during home return.
- *3 The actuator cable is a robot cable.
- *4 Use all tap holes (4 locations) on the same mounting surface to secure the actuator.
- *5 Do not screw in the bolt beyond the depth of the fixing tap hole. The internal parts may be damaged.
- * The standard length of the actuator cable is 200 mm. The cable length can be changed to 1000 mm by selecting an applicable option (model: AC1).

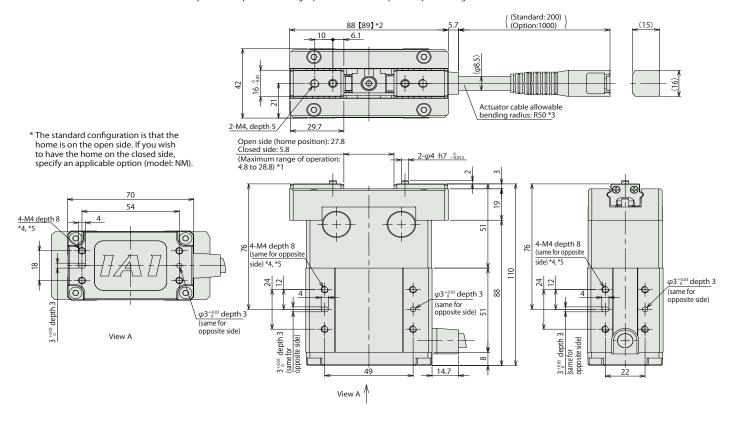

Compatible Controllers

The RCP4 series actuators can operate with the controllers below. Select the controller according to your usage.

| [| Name | External View | Model Number | Description | Max. Pos. Points | Input Voltage | Power Supply Capacity | See Page | | |
|---|--|------------------------|----------------------|--|------------------|---------------|------------------------------|------------------|--|--|
| | Solenoid Valve Multi-axis Type PIO Specification | lmr" | MSEP-C- ③ -~- ① -2-0 | Positioner type based on PIO control, allowing up to 8 axes to be connected | 3 points | | | See RoboCylinder | | |
| | Solenoid Valve Multi-axis Type Net- work Specification | NAME OF TAXABLE PARTY. | MSEP-C- ③ -~- ④ -0-0 | Filed network-ready positioner type, allowing up to 8 axes to be connected | 256 points | | General Catalog. 2.2 A max. | | | |
| | Positioner Type | - | PCON-CA-35PI- ① -2-0 | PIO control ready | 512 points | DC24V | | → P29 | | |
| | Pulse Train Type | | PCON-CA-35PI-PL□-2-0 | Pulse-train input ready | _ | | | | | |
| | Network Type | 1111 | PCON-CA-35PI- ④ -0-0 | Field network ready | 768 points | | | | | |

- * ① indicates I/O type (NP/PN).
- * 4 indicates field network specification symbol.
- *③ indicates number of axes (1~8).
 *□ indicates N (NPN specification) or P (PNP specification) symbol.

CP4-GRSW

RoboCylinder 2-Finger Gripper Vertical Extra Large Slider Type 80 mm Width Pulse Motor

Model Description

42P Motor

42P:42 □ size

Pulse motor

I: Incremental

* The Simple absolute encoder is also considered type "I."

28 30 Stroke

28:1/28

Deceleration

ratio

30:30 mm

(15 mm per side)

P3 Compatible Controllers

P3: PCON-CA

MSEP-C

Notes on Selection AC1: Actuator cable 1 m

N : None P : 1 m S : 3 m M : 5 m : Custom X □□ : Custom R □□ : Robot cable

NM: Non-motor end specification









- (1) The maximum opening/closing speed indicates the operating speed on one side. The relative operating speed is twice this value.
- (2) The maximum gripping force is the sum of the gripping forces of both fingers, at a gripping point where there is no offset or overhang distance. The work part weight that can be actually moved depends on the friction coefficient between the gripper fingers and the work part, as well as on the shape of the work part. As a rough guide, a work part's weight should not exceed 1/10 to 1/20 of the gripping force. (See page 25 for details.)
- (3) The rated acceleration while moving is 0.3 G.

■ Gripping Force vs. Electric Current Limit

The gripping (pushing) force can be adjusted freely within the range of electric current limits of 20% to 70%.

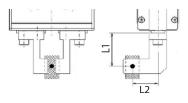

- * Operate with the L1 distance under 100 mm.
- * The gripping force in the graph below assumes that L1 and L2 the figure above are zero. (Refer to p. 26 for the rough guide gripping force at each distance of L1.) Also note that the gripping force is a sum of gripping forces of both fingers.

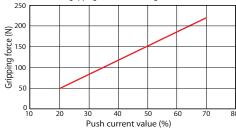

- * The gripping force graph above shows the number of references. Please allow margins up to $\pm 15\%$
- * Please note that, when gripping (pushing), the speed is fixed at 5 mm/s.

Actuator Specifications

■ Lead and Payload

Cable List

| Model Number | Deceleration | Max. Gripping | Stroke |
|----------------------------------|--------------|-----------------------|---------------------|
| | Ratio | Force (N) | (mm) |
| RCP4-GRSWL-I-42P-28-30-P3- 1 - 2 | 28 | 220 (110 per side) | 30 (15 per side) |

Legend: 1 Cable length 2 Options

■ Stroke and Max. Opening/Closing Speed

| Stroke (mm) | Max. Speed (mm/s) |
|-------------|-------------------|
| 30 | 157 |

Cable Symbol Type **P** (1m) Standard Type **S** (3m) **M** (5m) **X06** (6m) ~ **X10** (10m) Special Length **X11** (11m) ~ **X15** (15m) **X16** (16m) ~ **X20** (20m) **R01** (1m) ∼ **R03** (3m) **R04** (4m) ∼ **R05** (5m) Robot Cable **R06** (6m) ∼ **R10** (10m)

R11 (11m) ~ **R15** (15m) **R16** (16m) ~ **R20** (20m)

| Option List | | | |
|-----------------------------|-------------|----------|--|
| Name | Option Code | See Page | |
| Actuator Cable 1 m | AC1 | P16 | |
| Non-motor end specification | NM | P16 | |

Actuator Specifications


| · | | | | |
|----------------------------------|--|--|--|--|
| Item | Description | | | |
| Drive System | Worm gear + helical gear + helical rack | | | |
| Positioning Repeatability | ±0.01 mm | | | |
| Backlash per Finger | 0.4 mm or less | | | |
| Lost Motion | 0.15 mm or less per side | | | |
| Guide | Linear guide | | | |
| Static Load Moment | Ma: 5.1N•m Mb: 7.2N•m Mc: 12.4N•m | | | |
| Weight | 1.6 kg | | | |
| Ambient Operating Temp./Humidity | 0 to 40°C, 85% RH or less (non-condensing) | | | |

www.intelligentactuator.com





- *1 This is the maximum range over which the finger operates during home return operation, etc. Be careful not to let the finger contact the customer's finger, any nearby work part, etc.
- *2 Be careful not to let the finger contact any nearby object or structure as it moves to the dimension in [] during home return.
- *3 The actuator cable is a robot cable.
- *4 Use all tap holes (4 locations) on the same mounting surface to secure the actuator.
- *5 Do not screw in the bolt beyond the depth of the fixing tap hole. The internal parts may be damaged.
- * The standard length of the actuator cable is 200 mm. The cable length can be changed to 1000 mm by selecting an applicable option (model: AC1).

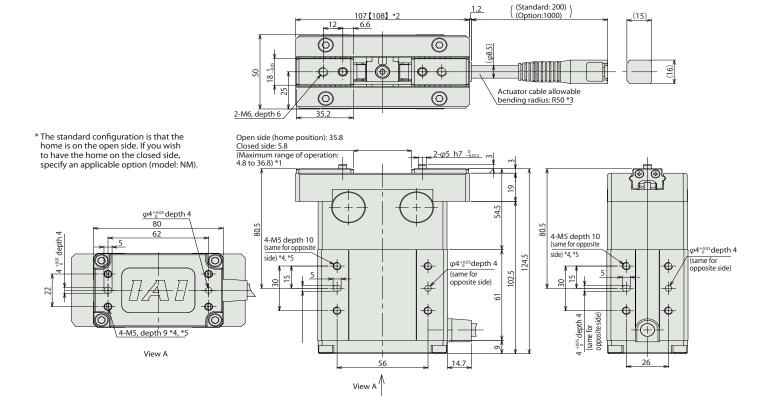

Compatible Controllers

The RCP4 series actuators can operate with the controllers below. Select the controller according to your usage.

| Name | External View | Model Number | Description | Max. Pos. Points | Input Voltage | Power Supply Capacity | See Page | |
|--|---------------|-----------------------|--|------------------|---------------|-----------------------|------------------|--|
| Solenoid Valve Multi-axis Type PIO Specification | dung" | MSEP-C- ③ -~- ① -2-0 | Positioner type based on PIO control, allowing up to 8 axes to be connected | 3 points | | | See RoboCylinder | |
| Solenoid Valve Multi-axis Type Net- work Specification | N REEL | MSEP-C- ③ -~- ④ -0-0 | Filed network-ready positioner type, allowing up to 8 axes to be connected | 256 points | | General Catalog. | | |
| Positioner Type | | PCON-CA-42PI- ① -2-0 | PIO control ready | 512 points | DC24V | 2.2 A max. | → P29 | |
| Pulse Train Type | | PCON-CA-42PI-PL□-2-0 | Pulse-train input ready | _ | | | | |
| Network Type | au. | PCON-CA-42PI- ④ - 0-0 | Field network ready | 768 points | | | | |

- * ① indicates I/O type (NP/PN).
- * 4 indicates field network specification symbol.
- * ③ indicates number of axes (1~8).
 * □ indicates N (NPN specification) or P (PNP specification) symbol.

RCP2-GRLS

RoboCylinder 2-Finger Gripper Vertical Small Lever Type 42 mm Width Pulse Motor

Model Description

RCP2 - GRLS -

Encoder —

I: Incremental

* The Simple absolute encoder is also considered type "I." **20P**

20P : 20 □ size

Pulse motor

30 — Deceleration —

30:1/30

Deceleration ratio

- **180** - Compatible Controllers

180:180 degree P1:PCON-PL/PO/SE

(90 degree per side) P1:PCON-PL/PO/SE PSEL RPCON P3:PCON-CA PMEC/PSEP

MSFP

N: None
P: 1m
S: 3m
M: 5m
X□□: Custom

Option NM : Non-motor end specification

FB : Flange bracket SB : Shaft bracket






Notes on Selection

- (1) The maximum opening/closing speed indicates the operating speed on one side. The relative operating speed is twice this value.
- (2) The maximum gripping force is the sum of the gripping forces of both fingers, at a gripping point where there is no offset or overhang distance. The work part weight that can be actually moved depends on the friction coefficient between the gripper fingers and the work part, as well as on the shape of the work part. As a rough guide, a work part's weight should not exceed 1/10 to 1/20 of the gripping force. (See page 27 for details.)
- (3) The rated acceleration while moving is 0.3 G.

■ Gripping Force vs. Electric Current Limit


The gripping (pushing) force can be adjusted freely within the range of electric current limits of 20% to 70%.

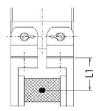

- * The gripping force of the graph below is measured on the top face of the lever. The actual gripping force drops in inverse proportion to the distance from the opening/closing fulcrum. Calculate the effective gripping force using the formula below.
- * Operate with the L1 distance under 40 mm.

Effective gripping force (GRLS) = $F \times 15.5/(L1 + 15.5)$

* In the graph below, the gripping force value is the sum of gripping forces of both fingers.

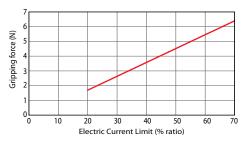

- * The gripping force graph above shows the number of references. Please allow margins up to \pm 15%.
- * Please note that, when gripping (pushing), the speed is fixed at 5 deg/s.

Actuator Specifications

■ Lead and Payload

| <u> </u> | | | |
|------------------------------------|-----------------------|----------------------------|----------------------|
| Model Number | Deceleration Ratio | Max. Gripping Force (N) | Stroke (degree) |
| RCP2-GRLS-I-20P-30-180- 11 - 2 - 3 | 30 | 6.4 (3.2 per side) | 180 (90 per side) |

Legend: 1 Compatible controllers 2 Cable length 3 Options

■ Stroke and Max. Opening/Closing Speed

| Decele- | 180 |
|--------------|-------------------|
| ration Ratio | (degree) |
| 30 | 600 (per side) |

(Unit: deg/s)

Cable List

| Type | Cable Symbol | |
|--------------------------------|-------------------------------------|--|
| C: 1 1 T | P (1m) | |
| Standard Type (Robot cable) | S (3m) | |
| (RODOL Cable) | M (5m) | |
| | X06 (6m) ~ X10 (10m) | |
| Special Length | X11 (11m) ~ X15 (15m) | |
| | X16 (16m) ~ X20 (20m) | |

 $^{^{}st}$ The standard cable is the motor-encoder integrated robot cable.

Actuator Specifications

| Item | Description |
|----------------------------------|--|
| Drive System | Worm gear + helical gear |
| Positioning Repeatability | ±0.01 degree |
| Backlash | 1.0 degree or less per side (constantly pressed out by a spring) |
| Lost Motion | 0.1 degree or less per side |
| Guide | - |
| Allowable Static Load Moment | = |
| Weight | 0.2 kg |
| Ambient Operating Temp./Humidity | 0 to 40°C, 85% RH or less (non-condensing) |

Option List


| Name | Option Code | See Page | |
|-----------------------------|-------------|----------|--|
| Non-motor end specification | NM | P 18 | |
| Flange bracket | FB | - | |
| Shaft bracket | SB | - | |


www.intelligentactuator.com








- $\ensuremath{^*}$ The opening side of the slider is the home position.
- *1 The motor-encoder cable is connected here. *2 Use all tap holes (4 locations) on the same
- mounting surface to secure the actuator. *3 Do not screw in the bolt beyond the depth of
- the fixing tap hole. The internal parts may be damaged.
- *4 The actuator cable is not a robot cable, so secure the cable while the actuator is in use.

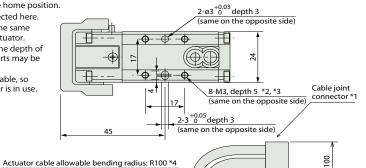

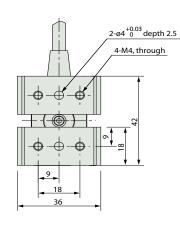

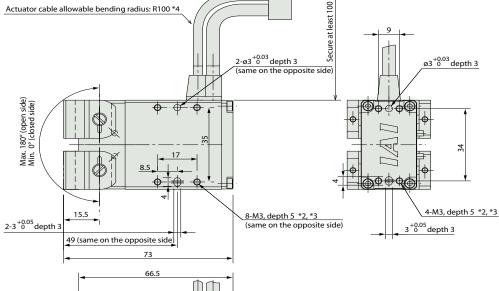

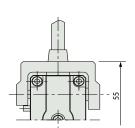

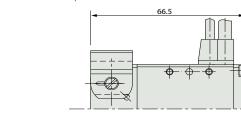

* The standard configuration is that the home is on the open side. If you wish to have the home on the closed side, specify an applicable option (model: NM).

Compatible Controllers

The RCP2 series actuators can operate with the controllers below. Select the controller according to your usage.

| Name | External View | Model Number | Description | Max. Pos. Points | Input Voltage | Power Supply Capacity | See Page | | |
|---|---------------|------------------------|---|------------------|---------------|--------------------------------------|---------------------|--|--|
| Solenoid Valve Multi-axis Type PIO Specification | 1 | MSEP-C- ③ -~- ① -2-0 | Positioner type based on PIO control, allowing up to 8 axes to be connected | 3 points | | See RoboCylinder General Catalog. | | | |
| Solenoid Valve Multi-axis Type Net- work Specification | | MSEP-C- ③ -~- ④ -0-0 | Filed network-ready positioner type, allowing up to 8 axes to be connected | 256 points | | | | | |
| Positioner Type | | PCON-CA-20PI- ①-2-0 | PIO control ready | 512 points | | | → P29 | | |
| Pulse Train Type | | PCON-CA-20PI-PL□-2-0 | Pulse-train input ready | _ | | | | | |
| Network Type | | PCON-CA-20PI- 4-0-0 | Field network ready | 768 points | DC24V | | | | |
| Pulse Train Type (Differential Line Driver Specification) | | PCON-PL-20PI- ① -2-0 | Differential line driver ready | _ | | See RoboCylinder General Catalog. | | | |
| Pulse Train Type (Open Collector Specification) | | PCON-PO-20PI- ① -2-0 | Open collector ready | _ | | | See RoboCylinder | | |
| Serial Communi- cation Type | | PCON-SE-20PI-N-0-0 | Dedicated serial communication type | 64 points | | | General Catalog. | | |
| Program Control Type | | PSEL-CS-1-20PI- ① -2-0 | Program operation is possible. Operation is possible up to 2 axes. | 1500 points | | | | | |

^{*} This is for the single-axis PSEL.

^{*} ① indicates I/O type (NP/PN).

^{*}indicates N (NPN specification) or P (PNP specification) symbol.

^{*3} indicates number of axes (1~8).

^{* 4} indicates field network specification symbol.

RCP4-GRLM

RoboCylinder 2-Finger Gripper Vertical Medium Lever Type 54 mm Width Pulse Motor

Model Description

RCP4 – GRLM

Series — Type

Encoder
I: Incremental

* The Simple absolute encoder is also considered type "I." 28P - 30
Motor - Deceleration

30:1/30

Pulse motor Deceleration (90 degree per side)

28P : 28 □ size

— **180** — Stroke — 180:180 degree

P3
Compatible Contro
P3: PCON-CA

MSEP-C

Cable Lei
N:None
P:1 m
S:3 m
M:5 m

Option
AC1 : Actuator cable

1 m NM : Non-motor end specification








- (1) The maximum opening/closing speed indicates the operating speed on one side. The relative operating speed is twice this value.
- (2) The maximum gripping force is the sum of the gripping forces of both fingers, at a gripping point where there is no offset or overhang distance. The work part weight that can be actually moved depends on the friction coefficient between the gripper fingers and the work part, as well as on the shape of the work part. As a rough guide, a work part's weight should not exceed 1/10 to 1/20 of the gripping force.
 (See page A-27 for details.)
- (3) The rated acceleration while moving is 0.3 G.

■ Gripping Force vs. Electric Current Limit

X □□ : Custom R □□ : Robot cable


The gripping (pushing) force can be adjusted freely within the range of electric current limits of 20% to 70%.

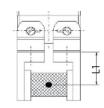

- * The gripping force of the graph below is measured on the top face of the lever. The actual gripping force drops in inverse proportion to the distance from the opening/closing fulcrum. Calculate the effective gripping force using the formula below.
- * Operate with the L1 distance under 100 mm.

Effective gripping force (GRLM) = $F \times 20 / (L1 + 20)$

* In the graph below, the gripping force value is the sum of gripping forces of both fingers.

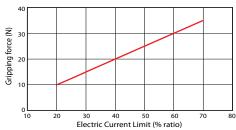

*The gripping force graph above shows the number of references. Please allow margins up to \pm 15%.

Actuator Specifications

■ Lead and Payload

| Model Number | Deceleration | Max. Gripping | Stroke |
|----------------------------------|--------------|-----------------------|----------------------|
| | Ratio | Force (N) | (degree) |
| RCP4-GRLM-I-28P-30-180-P3-11 - 2 | 30 | 35 (17.5 per side) | 180 (90 per side) |

Legend: 1 Cable length 2 Options

■ Stroke and Max. Opening/Closing Speed

| Stroke (degree) | Max. Speed (degree/s) |
|-----------------|-----------------------|
| 180 | 600 |

Cable List Cable Symbol **P** (1m) Standard Type **S** (3m) **M** (5m) **X06** (6m) ~ **X10** (10m) Special Length **X11** (11m) ~ **X15** (15m) **X16** (16m) ~ **X20** (20m) **R01** (1m) ∼ **R03** (3m) **R04** (4m) \sim **R05** (5m) **R06** (6m) \sim **R10** (10m) Robot Cable **R11** (11m) ~ **R15** (15m) **R16** (16m) ~ **R20** (20m)

| Option List | | | |
|-----------------------------|-------------|----------|--|
| Name | Option Code | See Page | |
| Actuator Cable 1 m | AC1 | P 20 | |
| Non-motor end specification | NM | P 20 | |

Actuator Specifications

| Item | Description | | |
|----------------------------------|--|--|--|
| Drive System | Worm gear + helical gear | | |
| Positioning Repeatability | ±0.05 degree | | |
| Backlash per Finger | 2.5 degree or less | | |
| Lost Motion | 0.3 degree or less per side | | |
| Guide | = | | |
| Static Load Moment | = | | |
| Weight | 0.5 kg | | |
| Ambient Operating Temp./Humidity | 0 to 40°C, 85% RH or less (non-condensing) | | |


^{*} Please note that, when gripping (pushing), the speed is fixed at 5 deg/s.

www.intelligentactuator.com





- *1 This is the maximum range over which the finger operates during home return operation, etc. Be careful not to let the finger contact the customer's finger, any nearby work part, etc.
- *2 The actuator cable is a robot cable.
- *3 Use all tap holes (4 locations) on the same mounting surface to secure the actuator.
- *4 Do not screw in the bolt beyond the depth of the fixing tap hole. The internal parts may be damaged.
- * The standard length of the actuator cable is 200 mm. The cable length can be changed to 1000 mm by selecting an applicable option (model: AC1).

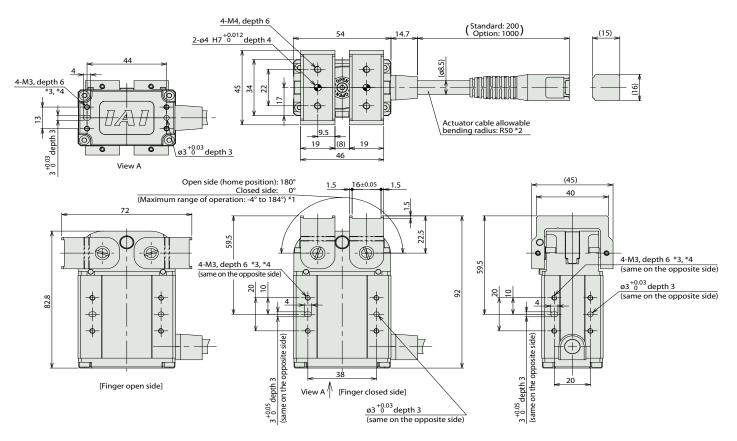

^{*} The standard configuration is that the home is on the open side. If you wish to have the home on the closed side, specify an applicable option (model: NM).

Compatible Controllers

The RCP4 series actuators can operate with the controllers below. Select the controller according to your usage.

| Name | External View | Model Number | Description | Max. Pos. Points | Input Voltage | Power Supply Capacity | | See Page |
|--|---------------|-----------------------|---|------------------|---------------|--------------------------------------|--|----------|
| Solenoid Valve Multi-axis Type PIO Specification | duir" | MSEP-C- ③ -~- ① -2-0 | Positioner type based on PIO control, allowing up to 8 axes to be connected | 3 points | | See RoboCylinder General Catalog. | | |
| Solenoid Valve Multi-axis Type Net- work Specification | NAMA . | MSEP-C- ③ -~- ④ -0-0 | Filed network-ready positioner type, allowing up to 8 axes to be connected | 256 points | | | | |
| Positioner Type | | PCON-CA-28PI- ① -2-0 | PIO control ready | 512 points | DC24V | | | → P29 |
| Pulse Train Type | | PCON-CA-28PI-PL□-2-0 | Pulse-train input ready | - | | 2.2 A max. | | |
| Network Type | | PCON-CA-28PI- ④ - 0-0 | Field network ready | 768 points | | | | |

- * 1 indicates I/O type (NP/PN).
- * 4 indicates field network specification symbol.
- * ③ indicates number of axes (1~8).
 * □ indicates N (NPN specification) or P (PNP specification) symbol.

RCP4-GRLL

RoboCylinder 2-Finger Gripper Vertical Large Lever Type 70 mm Width Pulse Motor

P3: PCON-CA

MSEP-C

Model Description

— Encod

I: Incremental

* The Simple absolute encoder is also considered type "I." 35P - 30

30:1/30

Pulse motor Deceleration (90 degree per side)

35P : 35 □ size

180 — Stroke — 180:180 degree

— P3 — Compatible C

- Cable Le
N : None
P : 1 m
S : 3 m
M : 5 m

Option
AC1 : Actuator cable
1 m

M:5 m X□□: Custom R□□: Robot cable NM : Non-motor end specification








- (1) The maximum opening/closing speed indicates the operating speed on one side. The relative operating speed is twice this value.
- (2) The maximum gripping force is the sum of the gripping forces of both fingers, at a gripping point where there is no offset or overhang distance. The work part weight that can be actually moved depends on the friction coefficient between the gripper fingers and the work part, as well as on the shape of the work part. As a rough guide, a work part's weight should not exceed 1/10 to 1/20 of the gripping force. (See page A-27 for details.)
- (3) The rated acceleration while moving is 0.3 G.

■ Gripping Force vs. Electric Current Limit


The gripping (pushing) force can be adjusted freely within the range of electric current limits of 20% to 70%.

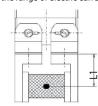

- *The gripping force of the graph below is measured on the top face of the lever. The actual gripping force drops in inverse proportion to the distance from the opening/closing fulcrum. Calculate the effective gripping force using the formula below.
- * Operate with the L1 distance under 100 mm.

Effective gripping force (GRLL) = F x 26 / (L1 + 26)

* In the graph below, the gripping force value is the sum of gripping forces of both fingers.

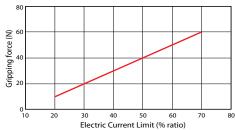

* The gripping force graph above shows the number of references. Please allow margins up to \pm 15%.

Actuator Specifications

■ Lead and Payload

| Model Number | Deceleration | Max. Gripping | Stroke |
|----------------------------------|--------------|---------------------|----------------------|
| | Ratio | Force (N) | (degree) |
| RCP4-GRLL-I-35P-30-180-P3- 1 - 2 | 30 | 60 (30 per side) | 180 (90 per side) |

Legend: 1 Cable length 2 Options

■ Stroke and Max. Opening/Closing Speed

| Stroke (degree) | Max. Speed (degree/s) |
|-----------------|-----------------------|
| 180 | 600 |

Cable List

| Type | Cable Symbol |
|----------------|-------------------------------------|
| | P (1m) |
| Standard Type | S (3m) |
| | M (5m) |
| | X06 (6m) ~ X10 (10m) |
| Special Length | X11 (11m) ~ X15 (15m) |
| | X16 (16m) ~ X20 (20m) |
| | R01 (1m) ∼ R03 (3m) |
| | R04 (4m) ∼ R05 (5m) |
| Robot Cable | R06 (6m) ∼ R10 (10m) |
| | R11 (11m) ~ R15 (15m) |
| | R16 (16m) ~ R20 (20m) |

Option List

| Name | Option Code | See Page | |
|-----------------------------|-------------|----------|--|
| Actuator Cable 1 m | AC1 | P 22 | |
| Non-motor end specification | NM | P 22 | |

Actuator Specifications


| - | | |
|----------------------------------|--|--|
| ltem | Description | |
| Drive System | Worm gear + helical gear | |
| Positioning Repeatability | ± 0.05 degree | |
| Backlash per Finger | 2.5 degree or less | |
| Lost Motion | 0.3 degree or less per side | |
| Guide | = | |
| Static Load Moment | = | |
| Weight | 1.0. kg | |
| Ambient Operating Temp./Humidity | 0 to 40°C, 85% RH or less (non-condensing) | |

^{*} Please note that, when gripping (pushing), the speed is fixed at 5 deg/s.

CAD drawings can be downloaded from the website. www.intelligentactuator.com



- *1 This is the maximum range over which the finger operates during home return operation, etc. Be careful not to let the finger contact the customer's finger, any nearby work part, etc.
- *2 The actuator cable is a robot cable.
- * 3 Use all tap holes (4 locations) on the same mounting surface to secure the actuator.
- *4 Do not screw in the bolt beyond the depth of the fixing tap hole. The internal parts may be damaged.
- * The standard length of the actuator cable is 200 mm. The cable length can be changed to 1000 mm by selecting an applicable option (model: AC1).

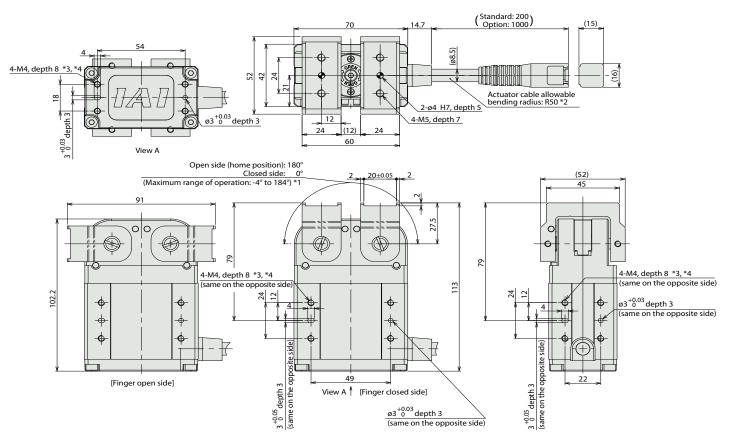

* The standard configuration is that the home is on the open side. If you wish to have the home on the closed side, specify an applicable option (model: NM).

Compatible Controllers

The RCP4 series actuators can operate with the controllers below. Select the controller according to your usage.

| Name | External View | Model Number | Description | Max. Pos. Points | Input Voltage | Power Supply Capacity | See Page | | |
|--|---------------|-----------------------|--|------------------|---------------|-----------------------|----------|------------------|--|
| Solenoid Valve Multi-axis Type PIO Specification | inir | MSEP-C- ③ -~- ① -2-0 | Positioner type based on PIO control, allowing up to 8 axes to be connected | 3 points | | | | See RoboCylinder | |
| Solenoid Valve Multi-axis Type Net- work Specification | AL RANA | MSEP-C- ③ -~- ④ -0-0 | Filed network-ready positioner type, allowing up to 8 axes to be connected | 256 points | | General Catalog. | | | |
| Positioner Type | | PCON-CA-35PI- ① -2-0 | PIO control ready | 512 points | DC24V | | → P29 | | |
| Pulse Train Type | | PCON-CA-35PI-PL□-2-0 | Pulse-train input ready | _ | | 2.2 A max. | | | |
| Network Type | | PCON-CA-35PI- ④ - 0-0 | Filed network ready | 768 points | | | | | |

- * 1) indicates I/O type (NP/PN).
- * ③ indicates number of axes (1~8).
- * ④ indicates field network specification symbol.
- *
 indicates N (NPN specification) or P (PNP specification) symbol.

CP4-GRLW

RoboCylinder 2-Finger Gripper Vertical Extra Large Lever Type 80 mm Width Pulse Motor

Model Description

Туре



42P 28 Motor

28:1/28

ratio

42P : 42 □ size

— 180 — – Stroke

Compatible Controllers 180 :180 degree Pulse motor Deceleration (90 degree per side)

P3: PCON-CA MSEP-C

P3

N : None P : 1 m S : 3 m M : 5 m

Option AC1: Actuator cable 1 m NM: Non-motor end specification

X □□ : Custom R □□ : Robot cable

C € RoHS






- $(1) The \ maximum \ opening/closing \ speed \ indicates \ the \ operating \ speed \ on \ one \ side.$ The relative operating speed is twice this value.
- (2) The maximum gripping force is the sum of the gripping forces of both fingers, at a gripping point where there is no offset or overhang distance. The work part weight that can be actually moved depends on the friction coefficient between the gripper fingers and the work part, as well as on the shape of the work part. As a rough guide, a work part's weight should not exceed 1/10 to 1/20 of the gripping force. (See page A-27 for details.)
- (3) The rated acceleration while moving is 0.3 G.

■ Gripping Force vs. Electric Current Limit


The gripping (pushing) force can be adjusted freely within the range of electric current limits of 20% to 70%.

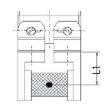

- * The gripping force of the graph below is measured on the top face of the lever. The actual gripping force drops in inverse proportion to the distance from the opening/closing fulcrum. Calculate the effective gripping force using the formula below.
- * Operate with the L1 distance under 100 mm.

Effective gripping force (GRLW) = $F \times 30 / (L1 + 30)$

* In the graph below, the gripping force value is the sum of gripping forces of both fingers.

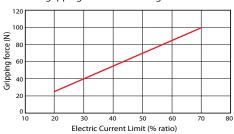

* The gripping force graph above shows the number of references. Please allow margins up to \pm 15%.

Actuator Specifications

■ Lead and Payload

| Model Number | Deceleration | Max. Gripping | Stroke |
|----------------------------------|--------------|---------------------|----------------------|
| | Ratio | Force (N) | (degree) |
| RCP4-GRLW-I-42P-28-180-P3- 1 - 2 | 28 | 90 (45 per side) | 180 (90 per side) |

Legend: 1 Cable length 2 Options

■ Stroke and Max. Opening/Closing Speed

| Stroke (degree) | Max. Speed (degree/s) |
|-----------------|-----------------------|
| 180 | 643 |

Cable List Cable Symbol **P** (1m) Standard Type **S** (3m) M (5m) **X06** (6m) \sim **X10** (10m) Special Length **X11** (11m) ~ **X15** (15m) **X16** (16m) ~ **X20** (20m) **R01** (1m) \sim **R03** (3m) **R04** (4m) \sim **R05** (5m) **R06** (6m) ~ R10 (10m) Robot Cable **R11** (11m) ~ **R15** (15m)

R16 (16m) ~ **R20** (20m)

Option List Name Option Code See Page Actuator Cable 1 m AC1 P 24 Non-motor end specification NM

Actuator Specifications

| ltem | Description | | | | | |
|----------------------------------|--|--|--|--|--|--|
| Drive System | Worm gear + helical gear | | | | | |
| Positioning Repeatability | ±0.05 degree | | | | | |
| Backlash per Finger | 2.5 degree or less | | | | | |
| Lost Motion | 0.3 degree or less per side | | | | | |
| Guide | | | | | | |
| Static Load Moment | = | | | | | |
| Weight | 1.4 kg | | | | | |
| Ambient Operating Temp./Humidity | 0 to 40°C, 85% RH or less (non-condensing) | | | | | |


^{*} Please note that, when gripping (pushing), the speed is fixed at 5 deg/s.

www.intelligentactuator.com





- *1 This is the maximum range over which the finger operates during home return operation, etc. Be careful not to let the finger contact the customer's finger, any nearby work part, etc.
- *2 The actuator cable is a robot cable.
- *3 Use all tap holes (4 locations) on the same mounting surface to secure the actuator.
- *4 Do not screw in the bolt beyond the depth of the fixing tap hole. The internal parts may be damaged.
- * The standard length of the actuator cable is 200 mm. The cable length can be changed to 1000 mm by selecting an applicable option (model: AC1).

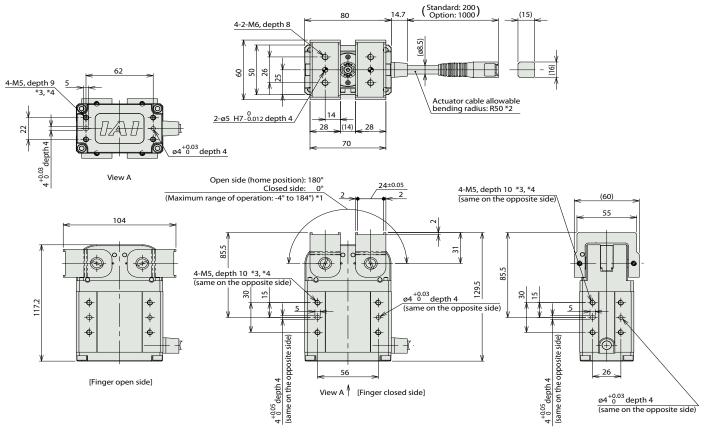

^{*} The standard configuration is that the home is on the open side. If you wish to have the home on the closed side, specify an applicable option (model: NM).

Compatible Controllers

The RCP4 series actuators can operate with the controllers below. Select the controller according to your usage.

| Name | External View | Model Number | Description | Max. Pos. Points | Input Voltage | Power Supply Capacity | See Page |
|--|---------------|-----------------------|--|------------------|---------------|-----------------------|----------|
| Solenoid Valve Multi-axis Type PIO Specification | ing. | MSEP-C- ③ -~- ① -2-0 | Positioner type based on PIO control, allowing up to 8 axes to be connected | 3 points | | See RoboCylinder | |
| Solenoid Valve Multi-axis Type Net- work Specification | NAMA - | MSEP-C- ③ -~- ④ -0-0 | Filed network-ready positioner type, allowing up to 8 axes to be connected | 256 points | | General Catalog. | |
| Positioner Type | | PCON-CA-42PI- ① -2-0 | PIO control ready | 512 points | DC24V | | → P29 |
| Pulse Train Type | | PCON-CA-42PI-PL□-2-0 | Pulse-train input ready | - | | 2.2 A max. | |
| Network Type | and. | PCON-CA-42PI- ④ - 0-0 | Field network ready | 768 points | | | |

^{* 1)} indicates I/O type (NP/PN).

^{* 3} indicates number of axes (1~8).

^{*} $\stackrel{\textcircled{4}}{ ext{ }}$ indicates field network specification symbol.

^{*} \square indicates N (NPN specification) or P (PNP specification) symbol.

How to Select Grippers

Slider Type

Step 1

Check the required gripping force and maximum allowable work part mass.



Step 2

Check the gripping point disatnce.



Step 3

Check the external forces the finger will receive.

Step 1 Check the required gripping force and maximum allowable work part mass.

If the work part is to be gripped using frictional force generated by gripping force, calculate the required gripping force as follows.

1 Normal Transfer

- F: Gripping force (N) Total sum of push forces of both fingers
- μ: Coefficient of static friction between the finger attachment and work part
- m: Work part mass (kg)
- g: Gravitational acceleration (= 9.8 m/s²)
- The conditions under which the work part remains statically gripped without dropping are as follows:

$$\mathsf{F}\,\mu > \mathsf{W} \qquad \mathsf{F} > \frac{\mathsf{m}\,\mathsf{g}}{\mu}$$

 Assuming a recommended safety factor of 2 for normal transfer, the required gripping force is calculated as follows:

$$F > \frac{m g}{u} \times 2$$
 (Safety factor)

• If the coefficient of friction μ is between 0.1 and 0.2, the following relationship holds water:


$$F > \frac{m g}{0.1 \sim 0.2} \times 2 = (10 \sim 20) \times m g$$

Normal transfer of work part

Required gripping force At least 10 to 20 times the work part mass

Max. allowable work part mass

Not more than 1/10th to 1/20th the gripp. force

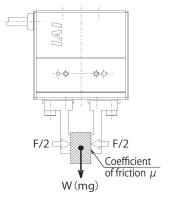

The greater the coefficient of static friction, the greater than maximum allowable work part mass becomes. To ensure safety, however, select a model that can generate a gripping force of at least 10 to 20 times this work part mass.

② Work part receive large acceleration/deceleration and/or impact force during transfer. In addition to the gravity, a strong inertial force may act upon the work part. In this case, select an appropriate model by increasing the safety factor further.


Receiving large acceleration/deceleration or impact


Required gripping force At least 30 to 50 times the work part mass

Max. allowable work part mass Not more than 1/30th to 1/50th the gripp. force

Step 2 Check the gripping point distance.

Use the actuator so that the distances (L, H) from the finger mounting surface to the gripping point fall in the ranges specified below. If the limits are exceeded, excessive moments may act upon the sliding part of the finger and internal mechanism, negatively affecting the service life of the actuator.

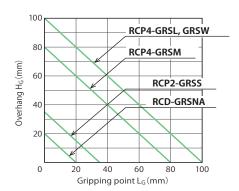


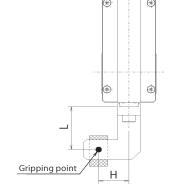



Even when the gripping point distance is within the limits, still design your actuator as compact and lightweight as possible. If the finger is long and large, or heavy, the inertial forces generating upon opening/closing as well as bending moments may cause the performance of the actuator to drop or negatively affect its guide.


Rough Guide for Shape and Mass of Work Part


- 1. The graphs show the gripping force as a function of the gripping point distance when the maximum gripping force represents 100%.
- 2. The gripping point distance indicates the longitudinal distance from the finger attachment mounting surface to the gripping point.
- 3. The gripping force varies from one actuator to another. Use the values provided below for reference purpose only.

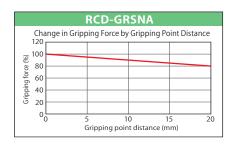

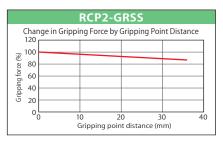

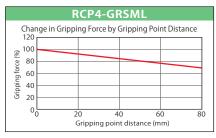

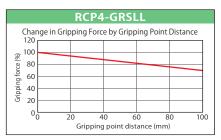

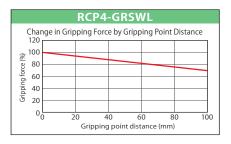

Load application point

Check the external forces the finger will receive. Step 3

1 Allowable vertical load

Confirm that the vertical load each finger will receive is equal to or less than the allowable load.

(2) Allowable load moment

Calculate Ma and Mc using L1, and Mb using L2. Confirm that the moments each finger will receive are equal to or less than the maximum allowable load moment.

• When each finger receives a moment load, the allowable external force must satisfy the relationship below:

M (Maximum allowable moment) (N·m) Allowable load F (N) >

Calculate the allowable load F (N) based on both L1 and L2.

Confirm that the external force the finger will receive is equal to or less than the calculated allowable load F (N) (based on L1 or L2, whichever is smaller).

| Model Number | Allowable vertical | Maximum allowable load moment (N·m) | | | | | |
|--------------|--------------------|-------------------------------------|------|------|--|--|--|
| Woder Number | load F (N)) | Ma | Mb | Мс | | | |
| RCD-GRSNA | 14 | 0.04 | 0.04 | 0.07 | | | |
| RCP2-GRSS | 60 | 0.5 | 0.5 | 1.5 | | | |
| RCP4-GRSM | 356 | 1.9 | 2.7 | 4.6 | | | |
| RCP4-GRSL | 558 | 3.8 | 5.5 | 9.5 | | | |
| RCP4-GRSW | 651 | 5.1 | 7.2 | 12.4 | | | |

- 1. The allowable values listed above are static values. 2. The allowable values are per-finger values.
- * The load application point shown above indicates the position of the load applied to the finger.
 - This position varies depending on the type of load.
 - Load due to gripping force: Gripping point
 Load due to gravity: Gravity center position

➂


Ѿ

· Inertial force while moving, centrifugal force while turning:

00

Gravity center position

The load moment represents the total sum of loads of different types.

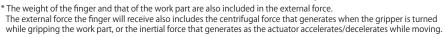

L Mc

L2

How to Select Grippers

Lever Type

Step 1

Check the required gripping force and maximum allowable work part mass.



Step 2

Check the inertial moment around the finger attachment.



Step 3

Check the external forces the finger will receive.

Step 1 Check the required gripping force and maximum allowable work part mass.

Follow the same instruction in step 1 for the slider type to calculate the required gripping force and confirm that the specified condition are met.

Normal transfer of work part

Required gripping force

At least 10 to 20 times the work part mass


Max. allowable work part mass

Not more than 1/10th to 1/20th the gripp. force

Receiving large acceleration/deceleration or impact

Required gripping force At least 30 to 50 times the work part mass

Max. allowable work part mass Not more than 1/30th to 1/50th the gripp. force

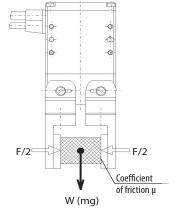

Step 2 Check the inertial moment around the finger attachment.

Confirm that the total inertial moment around the Z-axis (fulcrum) of the finger attachment is within the allowable range. Divide the total inertial moment into multiple components according to the configuration and shape of the finger and calculate each component separately. An example of calculating the total inertial moment by dividing it into two components is given below.

Z:(fulcrum)

[1] Inertial moment J_{Z1} around the Z1-axis (center of gravity of A) (Section A)

m1 : Mass of A (kg) a1, b1, c1 : Dimensions of A (mm)

m1 (kg) = a1 × b1 × c1 × Specific gravity ×
$$10^{-6}$$


$$J_{Z1} (kg \cdot m^2) = \frac{m1 (a1^2 \times b1^2) \times 10^{-6}}{12}$$


[2] Inertial moment J_{Z2} around the Z2-axis (center of gravity of B) (Section B)

m2: Mass of B (kg) a2, b2, c2: Dimensions of B (mm)

m2 (kg) = a2 × b2 × c2 × Specific gravity × 10⁻⁶

$$J_{Z2} (kg \cdot m^2) = \frac{m2 (a2^2 \times b2^2) \times 10^{-6}}{12}$$

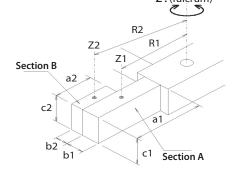

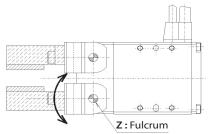

[3] Total inertial moment J around the Z-axis (fulcrum)

R1: Distance from the center of gravity of A to the fulcrum of opening/closing finger (mm) **R2**: Distance from the center of gravity of B to the fulcrum of opening/closing finger (mm)

$$J (kg \cdot m^2) = (J_{Z1} + m1 R1^2 \times 10^{-6}) + (J_{Z2} + m2 R2^2 \times 10^{-6})$$

| Model Number | Allowable inertial moment J (kg•m²) | Mass m (roughly) (kg) |
|--------------|-------------------------------------|-----------------------|
| RCP2-GRLS | 1.5×10 ⁻⁴ | 0.07 |
| RCP4-GRLM | 6.0×10 ⁻⁴ | 0.15 |
| RCP4-GRLL | 1.3×10 ⁻³ | 0.25 |
| RCP4-GRLW | 3.0×10 ⁻³ | 0.4 |

Step 3 Check the external forces the finger will receive.

[1] Allowable load torque T

Confirm that the load torque the finger will receive is equal to or less than the maximum allowable load torque. The load torque is calculated from the weight of the finger and that of the work part as follows.

m1: Work part mass (kg)

R1: Distance from the center of gravity of the work part to the fulcrum of opening/closing finger (mm)


m2: Finger mass (kg)

R2: Distance from the center of gravity of the finger to the fulcrum of opening/closing finger (mm)

g: Gravitational acceleration (9.8 m/s²)

T =
$$(W1 \times R1 \times 10^{-3}) + (W2 \times R2 \times 10^{-3}) + (Other load torque)$$

= $(m1 g \times R1 \times 10^{-3}) + (m2 g \times R2 \times 10^{-3}) + (Other load torque)$

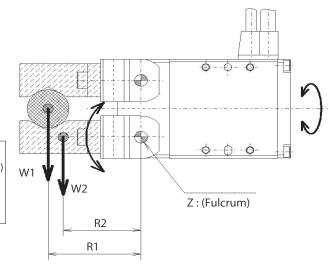


*The centrifugal force that generates when the gripper is turned while gripping the work part or the inertial force that generates as the actuator accelerates/decelerates while moving horizontally, is also a part of the load torque the finger will receive. Add each applicable force to the aforementioned torque to calculate the total torque, and confirm that the total torque is equal to or less than the maximum allowable load torque.

| Model Number | Maximum allowable load torque T (N•m) |
|--------------|---------------------------------------|
| RCP2-GRLS | 0.05 |
| RCP4-GRLM | 0.35 |
| RCP4-GRLL | 0.70 |
| RCP4-GRLW | 1.50 |

[2] Allowable thrust load F

Confirm that the thrust load generated by the finger opening/closing axis is equal to or less than the allowable load.

| Model Number | Maximum allowable thrust load F (N) |
|--------------|-------------------------------------|
| RCP2-GRLS | 15 |
| RCP4-GRLM | 20 |
| RCP4-GRLL | 25 |
| RCP4-GRLW | 30 |

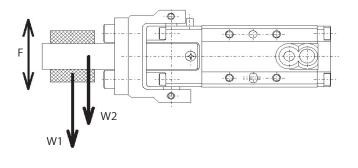





Positioner / Pulse-train / Field network Type

Position controller CON series for RCP2/RCP4 Gripper

List of Models

RoboCylinder Position Controller PowerCon 150 < PCON-CA>

| Externa | l view | | | | | | *************************************** | | | | |
|--------------------|----------------------------|-----------------|---------------------|-------------------------|--------------------------|------------------------|---|-------------------------------|------------------------|---------------------------|------------------------|
| | | | | | | Г | Field net | work type | (*) Me | echatrolink w/o C | E conformity yet. |
| I/0 t | ype | Positioner type | Pulse-train type | DeviceNet | CC-Link | PROFII® TBUST | CompoNet | MECHATROLINK | EtherCAT. | EtherNet/IP | PROFII® |
| | 3,6 | | 31 | DeviceNet specification | CC-Link specification | PROFIBUS specification | CompoNet specification | MECHATROLINK specification(*) | EtherCAT specification | EtherNet/IP specification | PROFINET specification |
| I/0 co | ode | NP/PN | PLN/PLP | DV | CC | PR | CN | ML | EC | EP | PRT |
| Incremental | specification | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| | With absolute battery | 0 | _ | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Simple absolute | With absolute battery unit | 0 | _ | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| specification | No absolute battery | 0 | _ | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |



Positioner / Field network 8-axis Type

Position controller SEP series for RCP2/RCP4 Gripper



List of Models

| Туре | С | | | | | | | | | | | |
|---------------|---------------------------------|---------------------------------|-------------------------|-----------------------|---|------------------------|--------------------------------|------------------------|---------------------------|------------------------|--|--|
| I/O category | NP | PN | DV | CC | CN | ML | EC | EP | PRT | | | |
| Item name | PIO specification (NPN type) | PIO specification (PNP type) | DeviceNet specification | CC-Link specification | PROFIBUS-DP specification | CompoNet specification | MECHATROLINK specification (*) | EtherCAT specification | EtherNet/IP specification | ProfiNet specification | | |
| Exterior view | | | | | * The picture shown is of the PIO specification. Depending on the I/O category, the PIO connector and field network joint connector changes. | | | | | | | |

Operates with any of the above field network connections. A choice of method either a serial communication with PIO specification control, or transmitting traveling position, velocity and acceleration by data is available.

256 positions per axis (There is no limit if operated directly by transferring data)




5m

Positioner Standard / Dustproof Type (Model C/CW)

3-Position controller SEP series for RCD Gripper

Controller Model Description DSEP 3 Series Motor Encoder I/O type I/O cable length Type Power supply voltage Standard Brushless, Incremental ΝP NPN No cable 24 V DC DC, 2.5 W Dustproof 2 m (standard) 3m

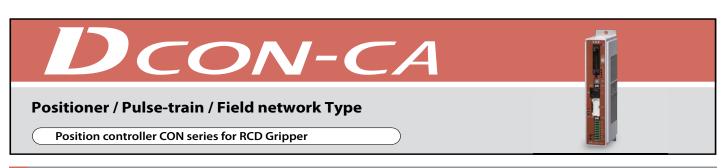


List of Models

RoboCylinder Position Controller < DCON-CA>

| | , | | | | | | | | | | |
|--|---|-------|---------------------|------------------------------------|---|--------------------------------------|------------|---|-------------------|--------------------------------------|--------------------------------------|
| | | | | | Field network type (*) Mechatrolink w/o CE conf | | | | | | |
| | I/O type | PIO | Pulse-train type | DeviceNet | CC-Link | PROFIT® | CompoNet | MECHATROLINK | Ether CAT. | EtherNet/IP> | PROFO® DNETD |
| | | type | | DeviceNet connection specification | CC-Link connection specification | PROFIBUS-DP connection specification | connection | Mechatrolink connection specification (*) | connection | EtherNet/IP connection specification | PROFINET-IO connection specification |
| | I/O code | NP/PN | PLN/PLP | DV | CC | PR | CN | ML | EC | EP | PRT |
| | Incremental specification | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

Controller Model Description

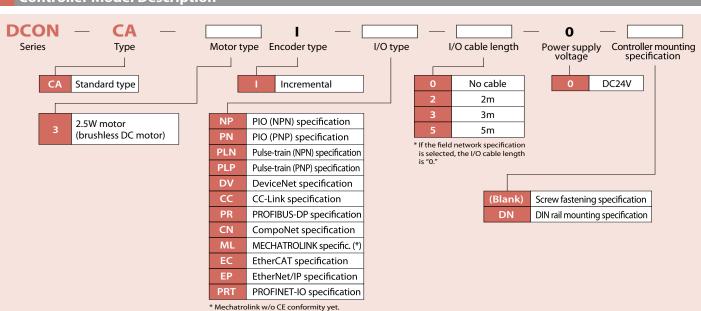



Headquarters: 2690 W. 237th Street, Torrance, CA 9050 (800) 736-1712 Chicago Office: 110 East State Parkway, Schaumburg, IL 60173 (800) 944-0333 Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066 (888) 354-9470

www.intelligentactuator.com

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany

IAI Robot (Thailand), CO., Ltd.

825 PhairojKijja Tower 12th Floor, Bangna-Trad RD., Bangna, Bangna, Bangkok 10260, Thailand

